

## Wireless door chime Manual (Plug-in chime)

Thank you for choosing wireless door chime. Please read this instruction carefully before assembling & using the product.

### What's Included in your Kit

- ✓ 1 x Plug-in Chime
- ✓ 1 x instruction manual

### Features:

- Classic and fashion design, Easy to install, solve your problem simply.
- Design of low power consumption, power-saving mode.
- 38-52 select-able polyphonic tones, 4 levels adjustable volume.
- With learning code function, free learning pairing.

### Specifications:


Working voltage AC 100~240V

Power Consumption ≤0.5W

Sensitivity -110dbm

Working Frequency 433.92 MHz±200KHz

Volume 10-90db

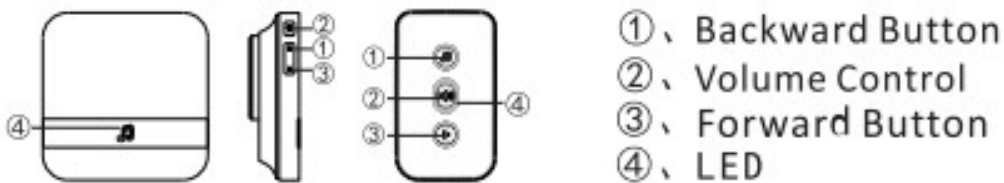

### Plug-in Chime Operation:

The Plug-in Chime provides a choice of 38-52 different melodies. When the Chime unit is plugged in, press the Chime unit select button ① to play previous music and button ③ to play next music until you hear a chime you like .

1. **Sound Volume Selection:** Press the button ② repeatedly until the desired volume is achieved – 4 levels are available as a circle.
2. **Pairing your Doorbell:** The Push Button and Plug-in Chime in your kit have already been paired. If for some reason pairing is lost, here's how to pair them Press in: s and hold the button ② for 3 seconds until the LED indicator lights up, plug-in Chime enters into pairing status. Then press the button on the Push Button within 5 seconds, pairing is completed once LED indicator on the Plug-in Chime is fast flashing. When above procedure is finished, pairing is quit automatically.
3. Two or above Push Buttons Choosing the Same Music or Same Chime Unit : Repeat step 3.
4. Two or above Push Button Pairing with Different Music: Press button ① and button ③ select music, Repeat step 3.
5. **All Pairing Memory Clearance:** In the unplugged state, press and hold the button ② and insert the power supply, wait for 5 seconds, let go when the LED light is on, program backs to default.