


Instructions

Please read this manual before you use

1. Connecting Diagram

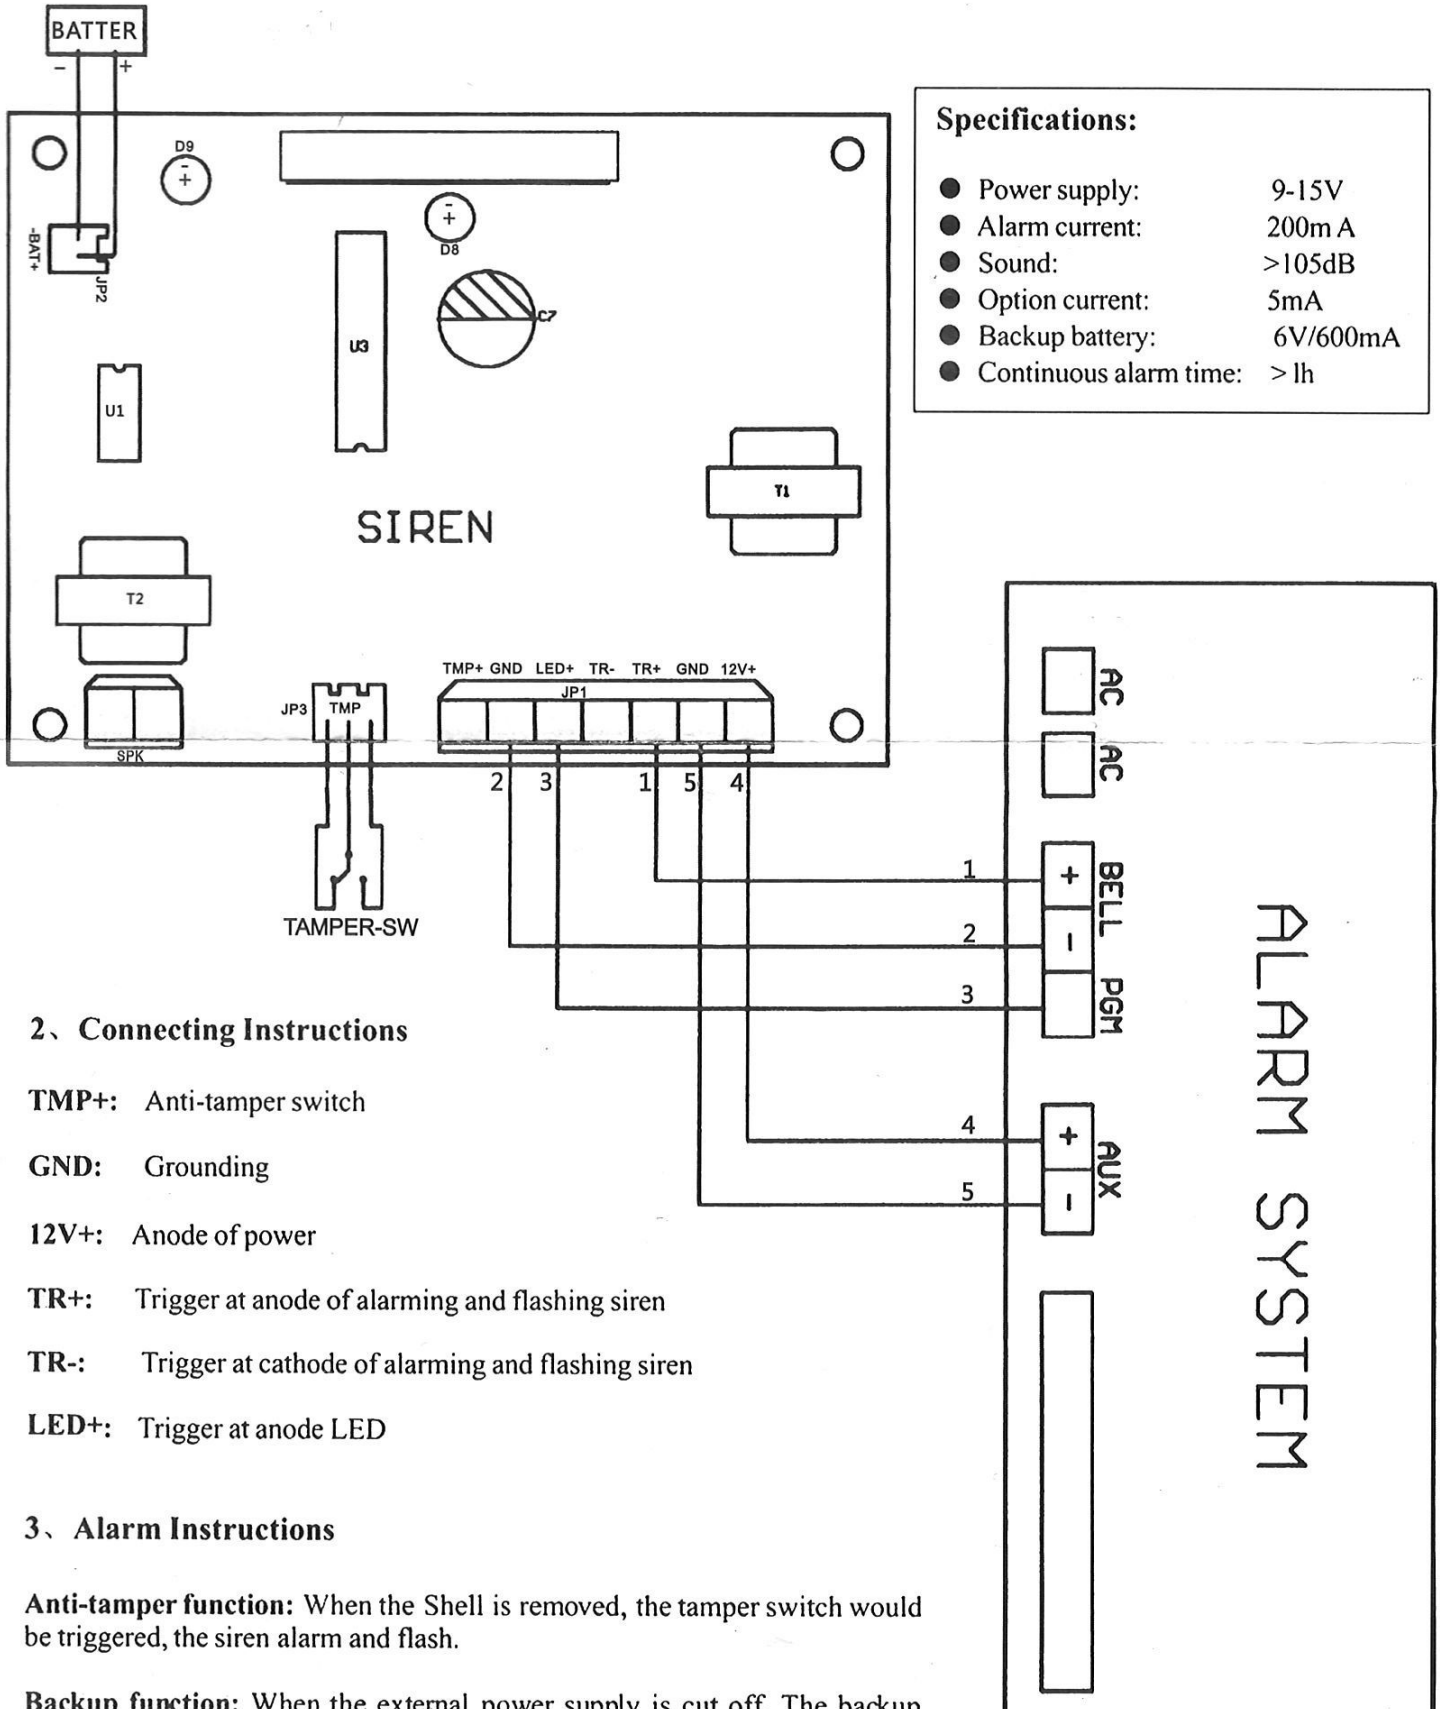

2. Connecting Instructions

TMP+: Anti-tamper switch

GND: Grounding

12V+: Anode of power

TR+: Trigger at anode of alarming and flashing siren

TR-: Trigger at cathode of alarming and flashing siren

LED+: Trigger at anode LED

3. Alarm Instructions

Anti-tamper function: When the Shell is removed, the tamper switch would be triggered, the siren alarm and flash.

Backup function: When the external power supply is cut off, The backup battery will work, the siren alarm and flash.